


MENU FLOWCHART

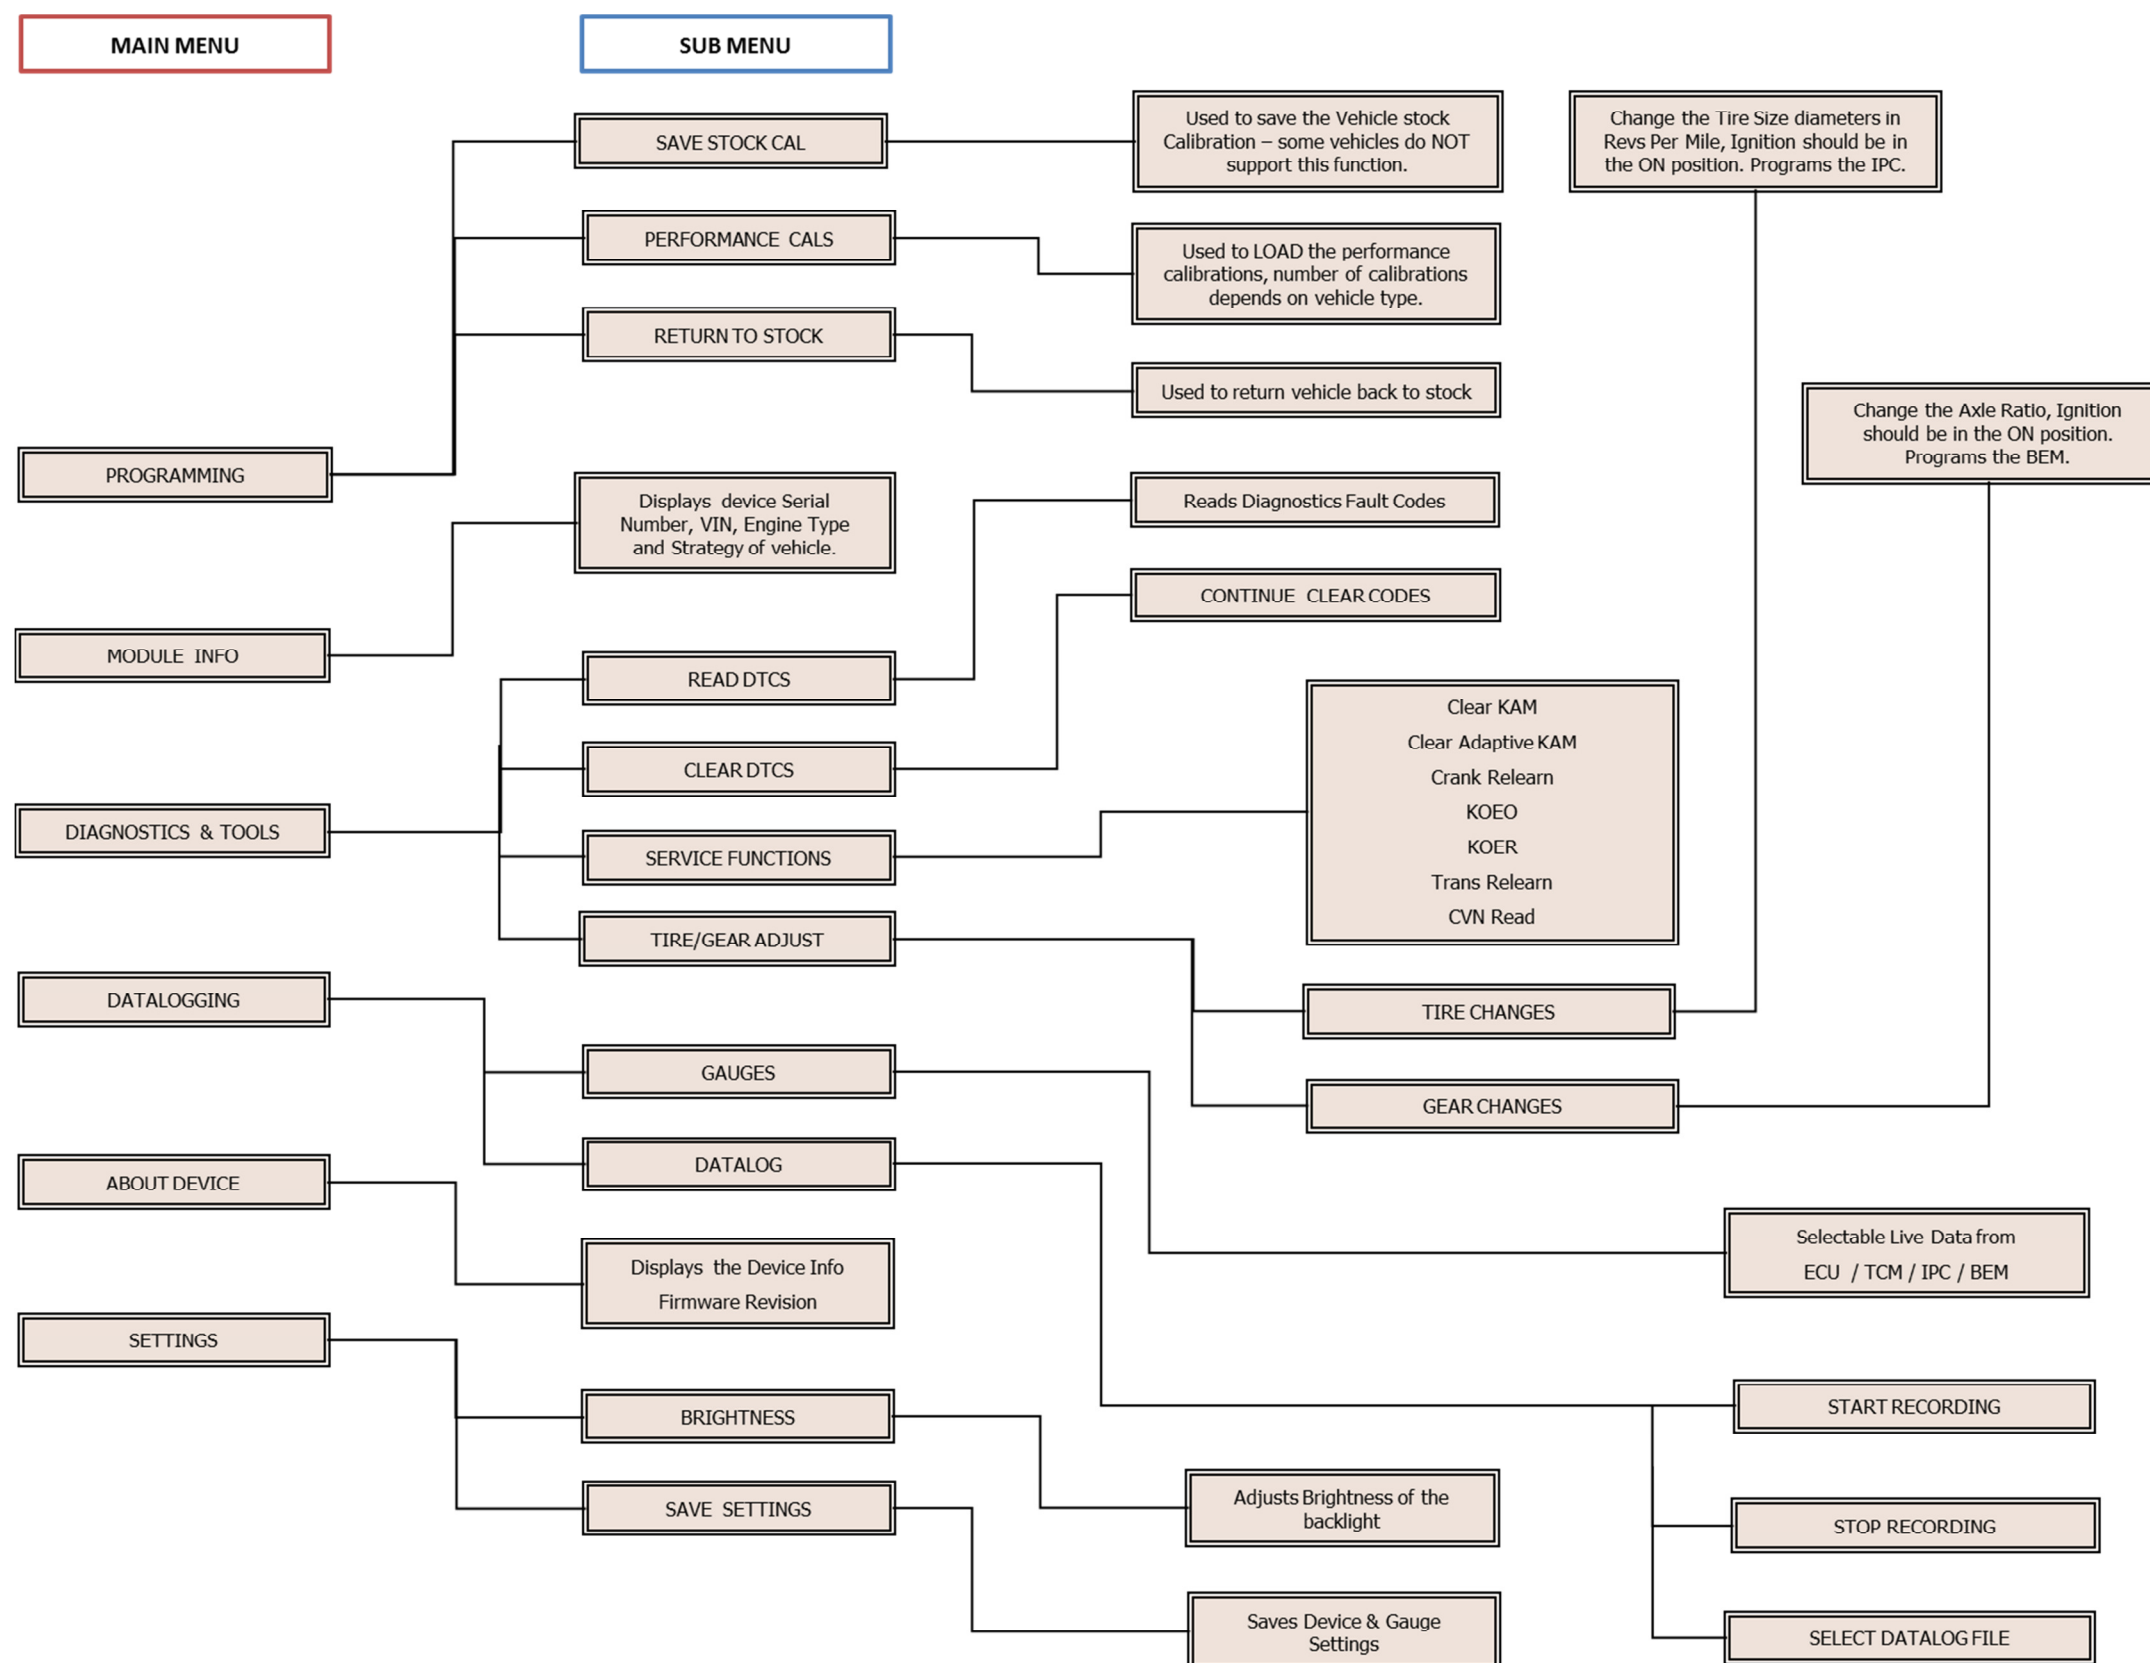

MyCalibrator



CONTACTS

Dealer Website: <http://www.bptmotorsport.com.au>
 Dealer Email: sales@bptmotorsport.com
 Facebook @BPT Motorsport
 Messenger @ BPT Motorsport
 Telephone: 08 9302 3415

Selectable Live Data from ECU / TCU / IPC / BEM NOTES:

ENGINE > EOM , 0 = Normal Engine Operation, 2 = DPF Regeneration in Progress, 8 = Engine Start Condition, 9 = Engine Warmup Mode – switches to mode 0 at ECT 70 deg C.
 EGT > EGRT_MAN = Exhaust Gas Temperature from Manifold.
 DPF > DPF_LOAD = Actual Soot Load over Catalyst, DPF_LOAD_LD = Accumulated PCM logic Load.